

PROCEDURE FOR MODIFICATION


For an **Export** configuration / 10 W AM / 10 W FM / 35 W SSB

1. Move jumper to position 2-3.
2. Cut the white thread.


For an **Export** configuration / 12.5 W AM / 35 W FM / 35 W SSB

1. Move jumper to position 2-3.
3. Move the white wire. Unsolder the right end of the loop and resolder it on the pad below.

Front

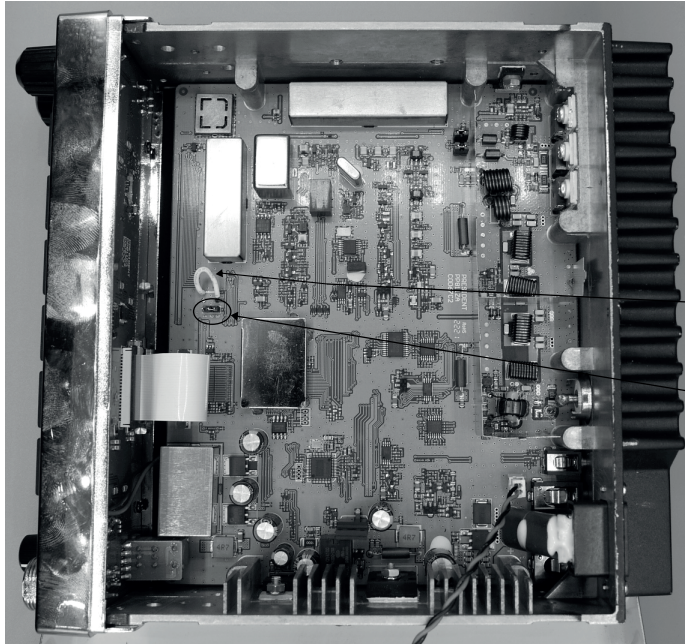

Bottom

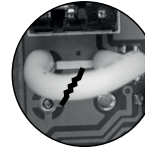


AM:10W / FM: 10W / SSB: 35W
2 - cut the white wire



AM:12.5W / FM: 35W / SSB: 35W
3 - move the white wire
as shown

1 - Jumper

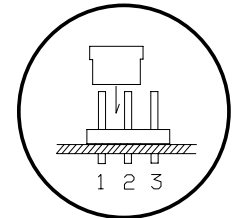

1-2 : Multiconfiguration
2-3 : Export 540 ch

On the following pages you will find the functions of the **Export** mode.